





CARVART



BY

**SOEMA®**  
*Handcrafted @ Technology*


glassLOCKERS>Concealed Hinge

INSTALLATION INSTRUCTIONS

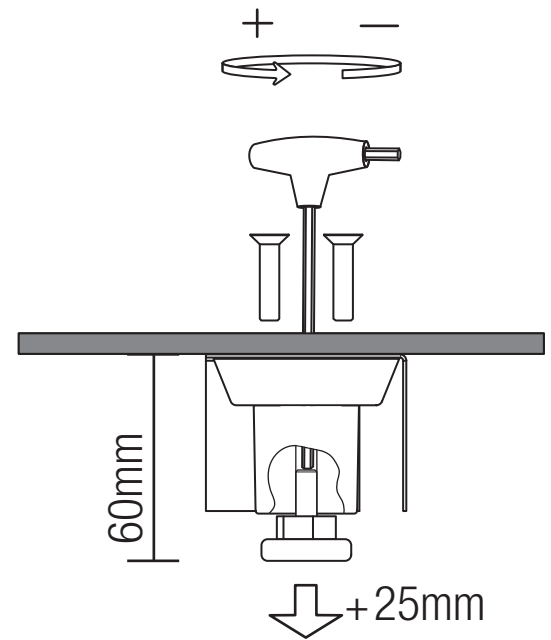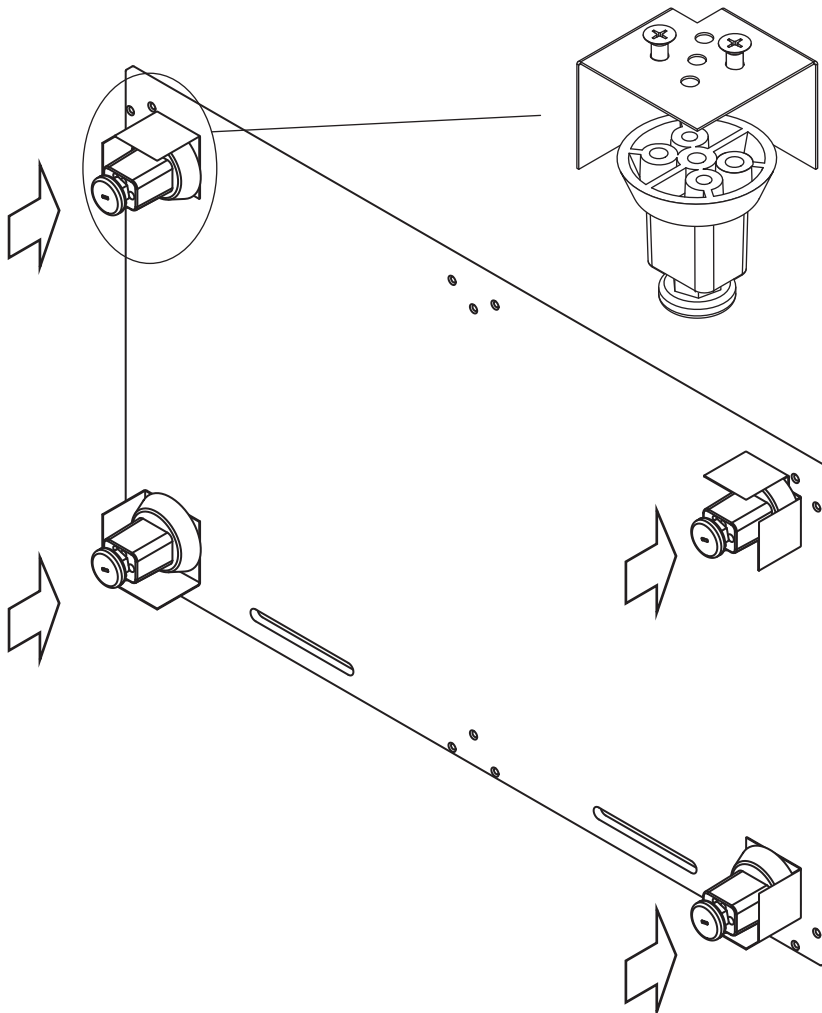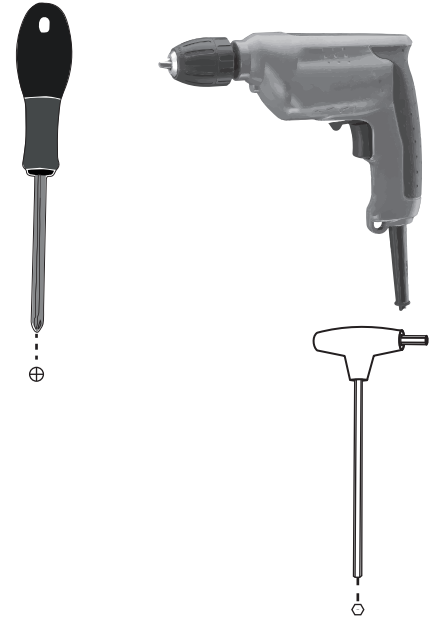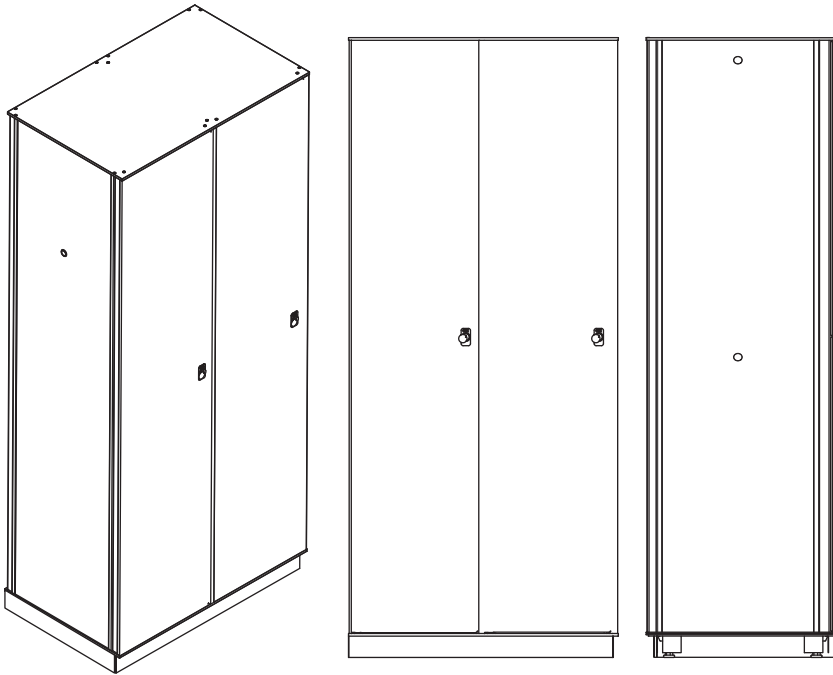


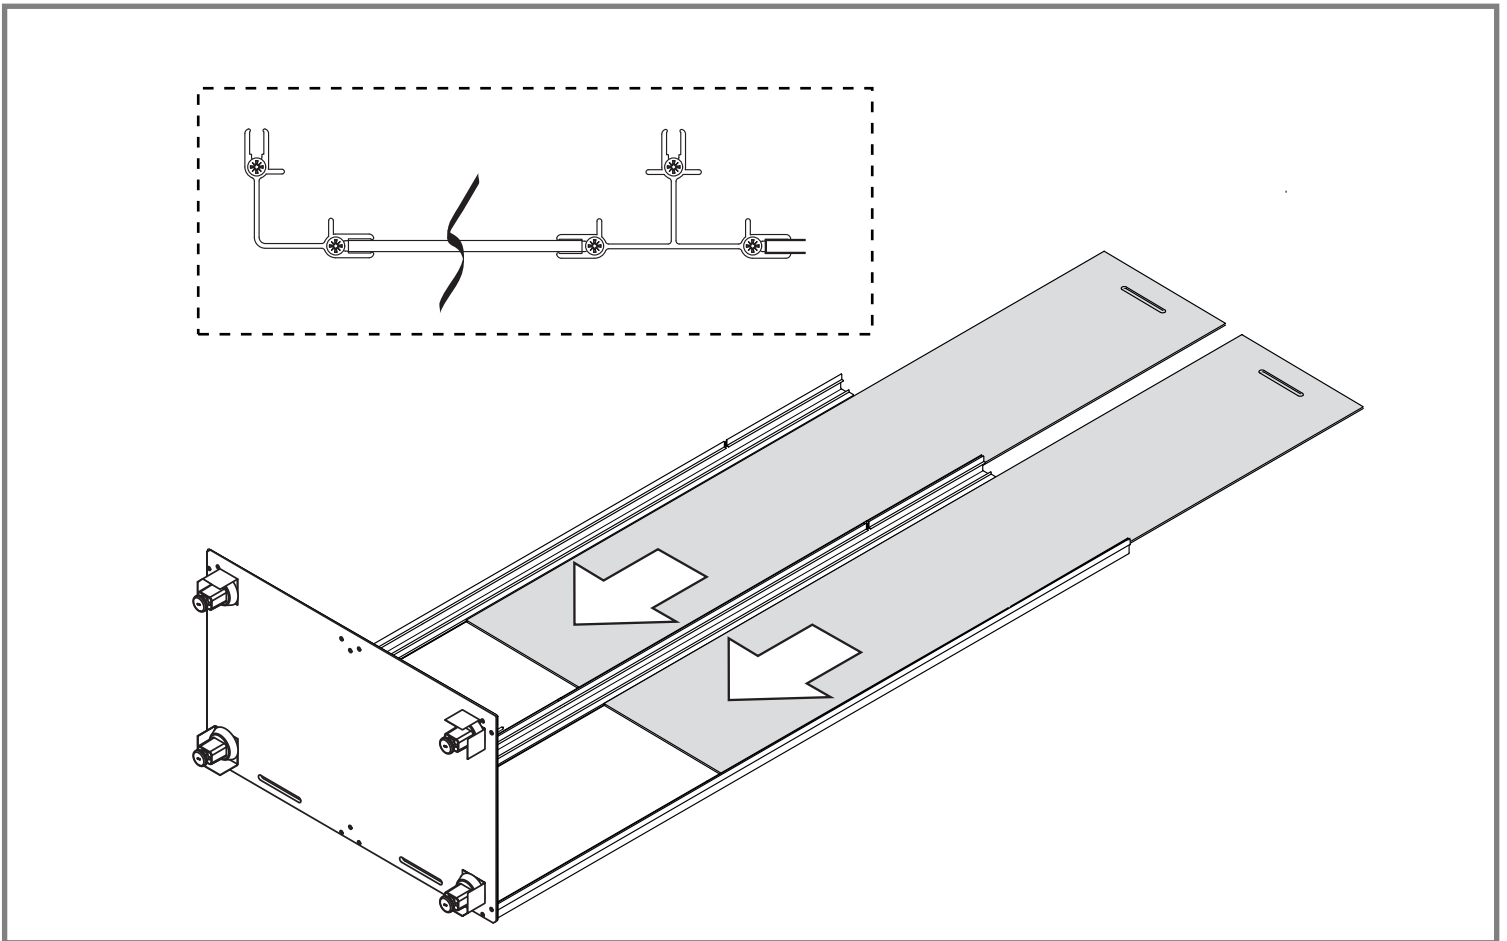
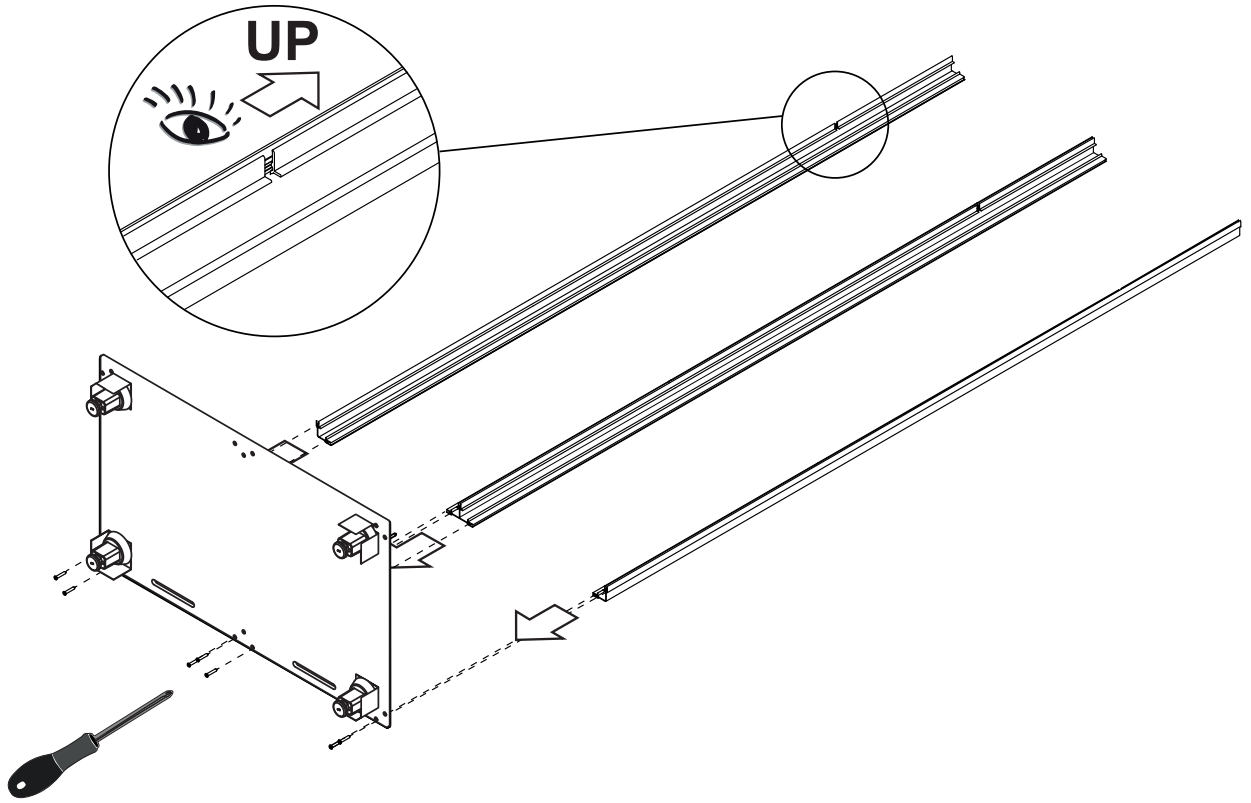




**STANDARD\***


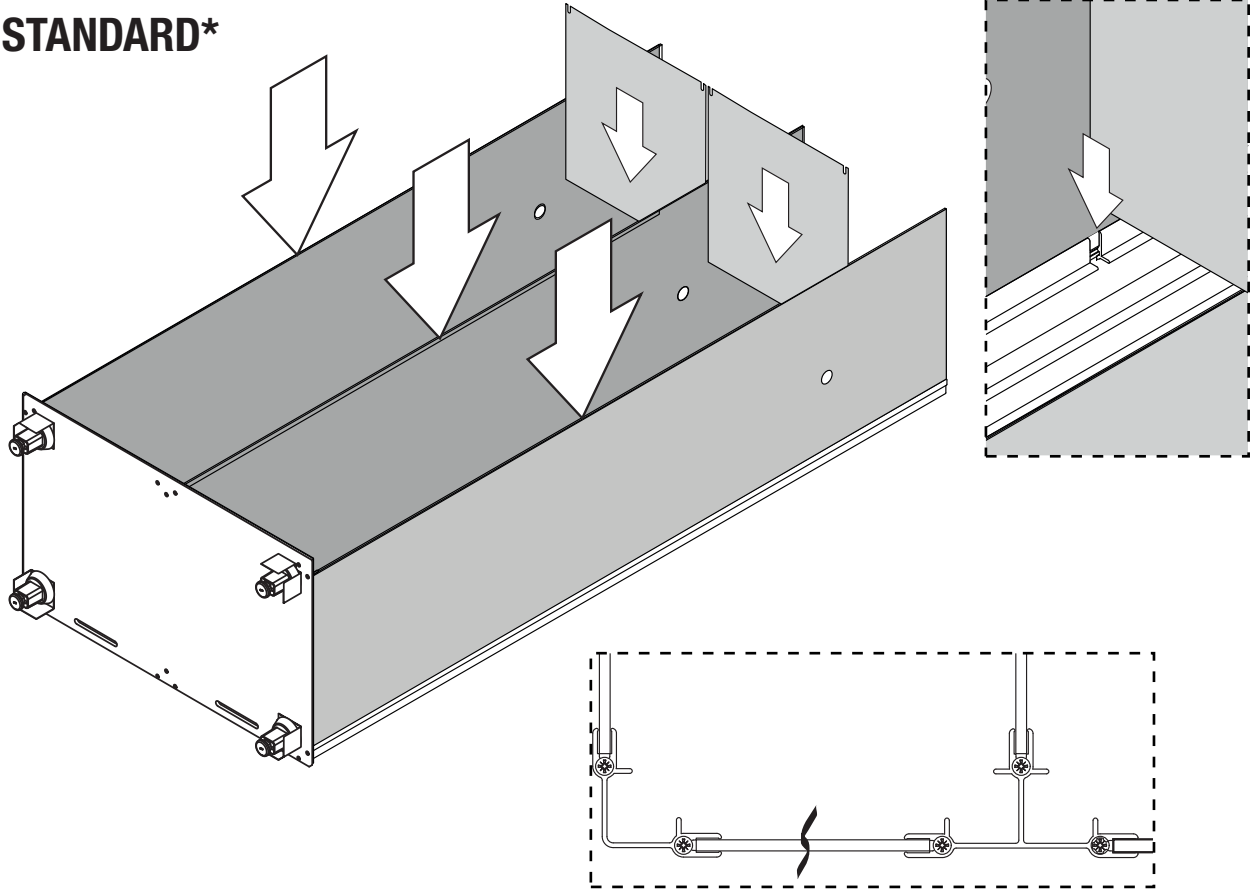




**TYPE-Z\***

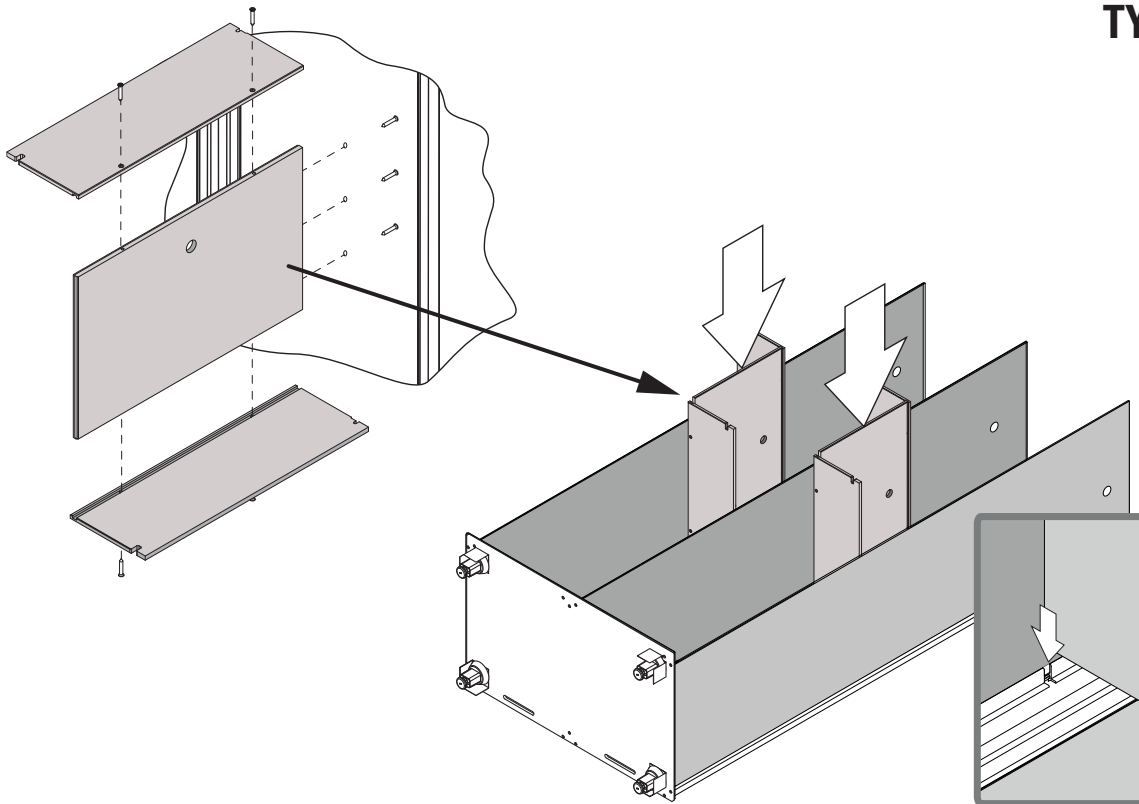




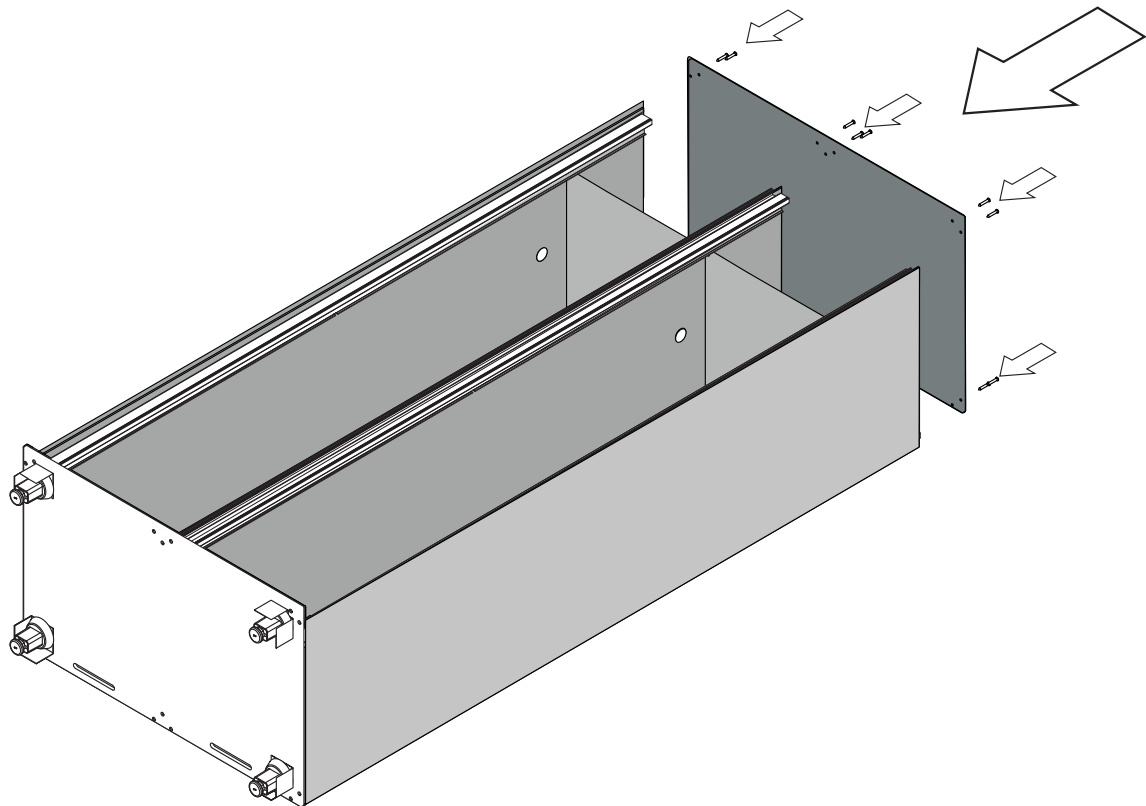
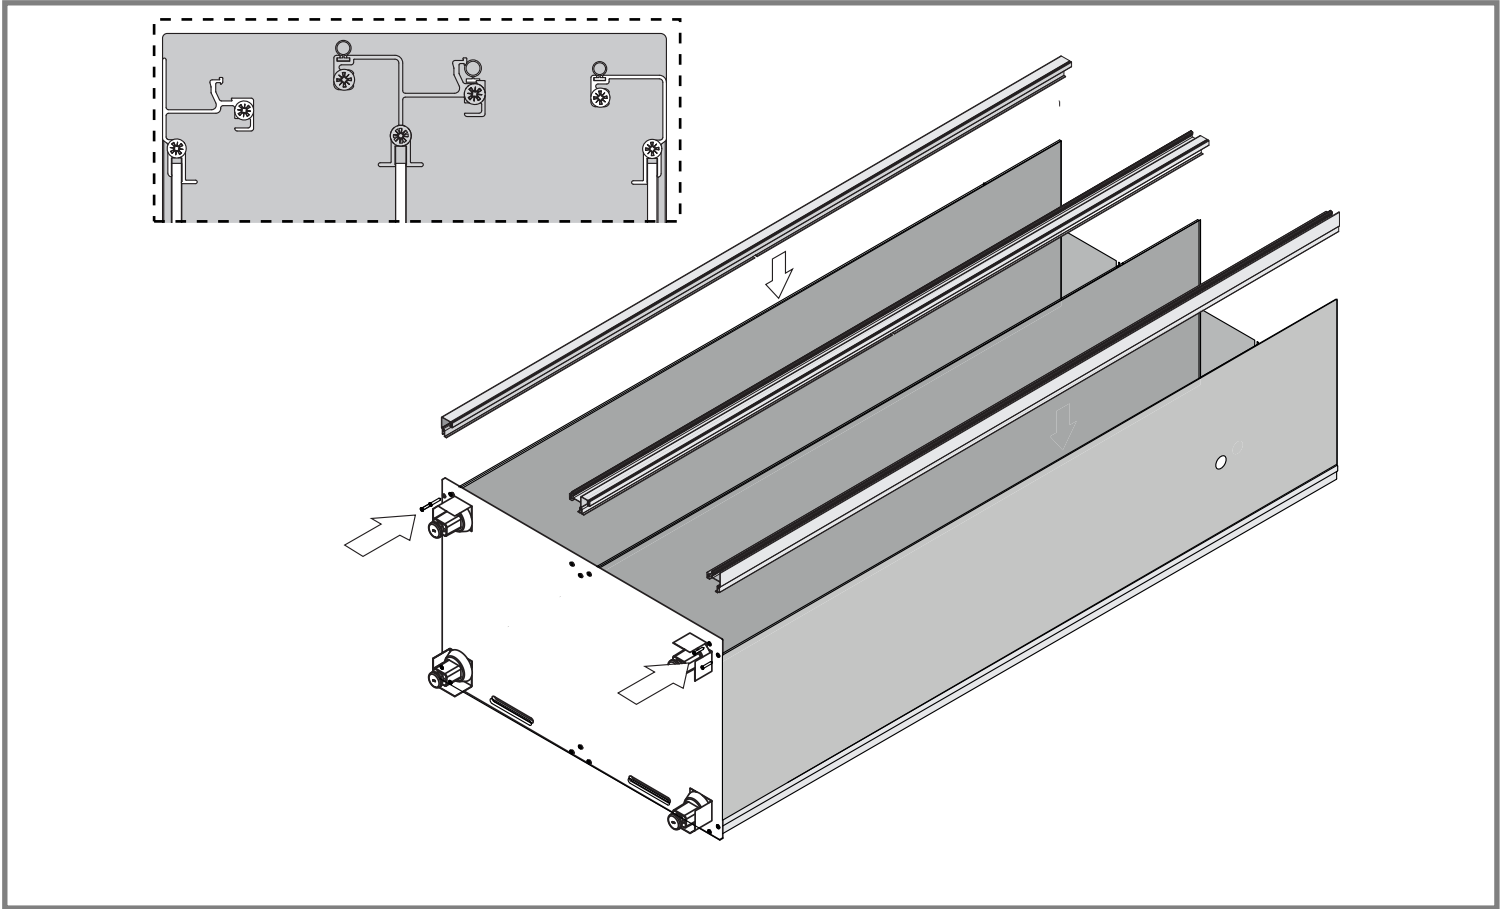


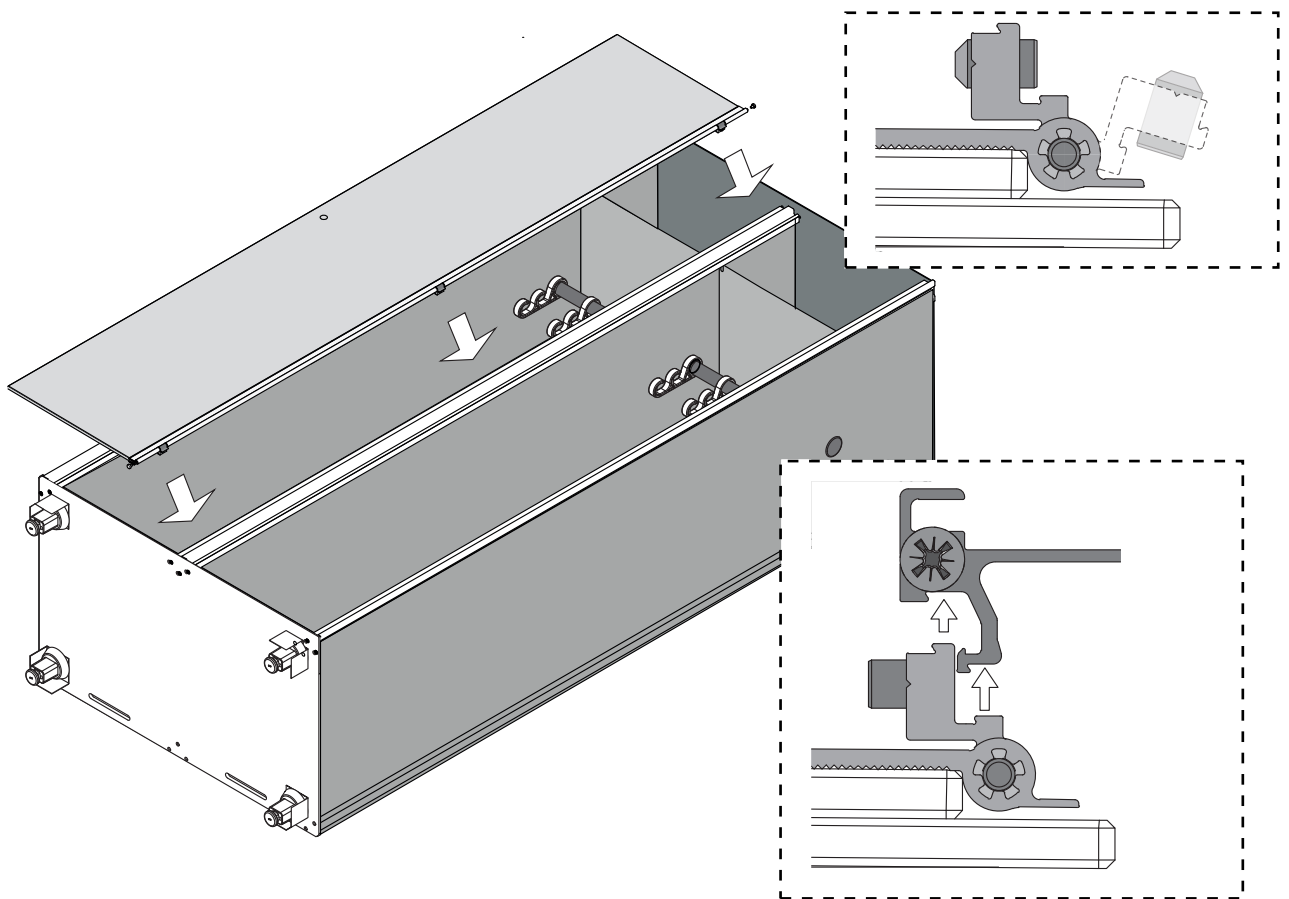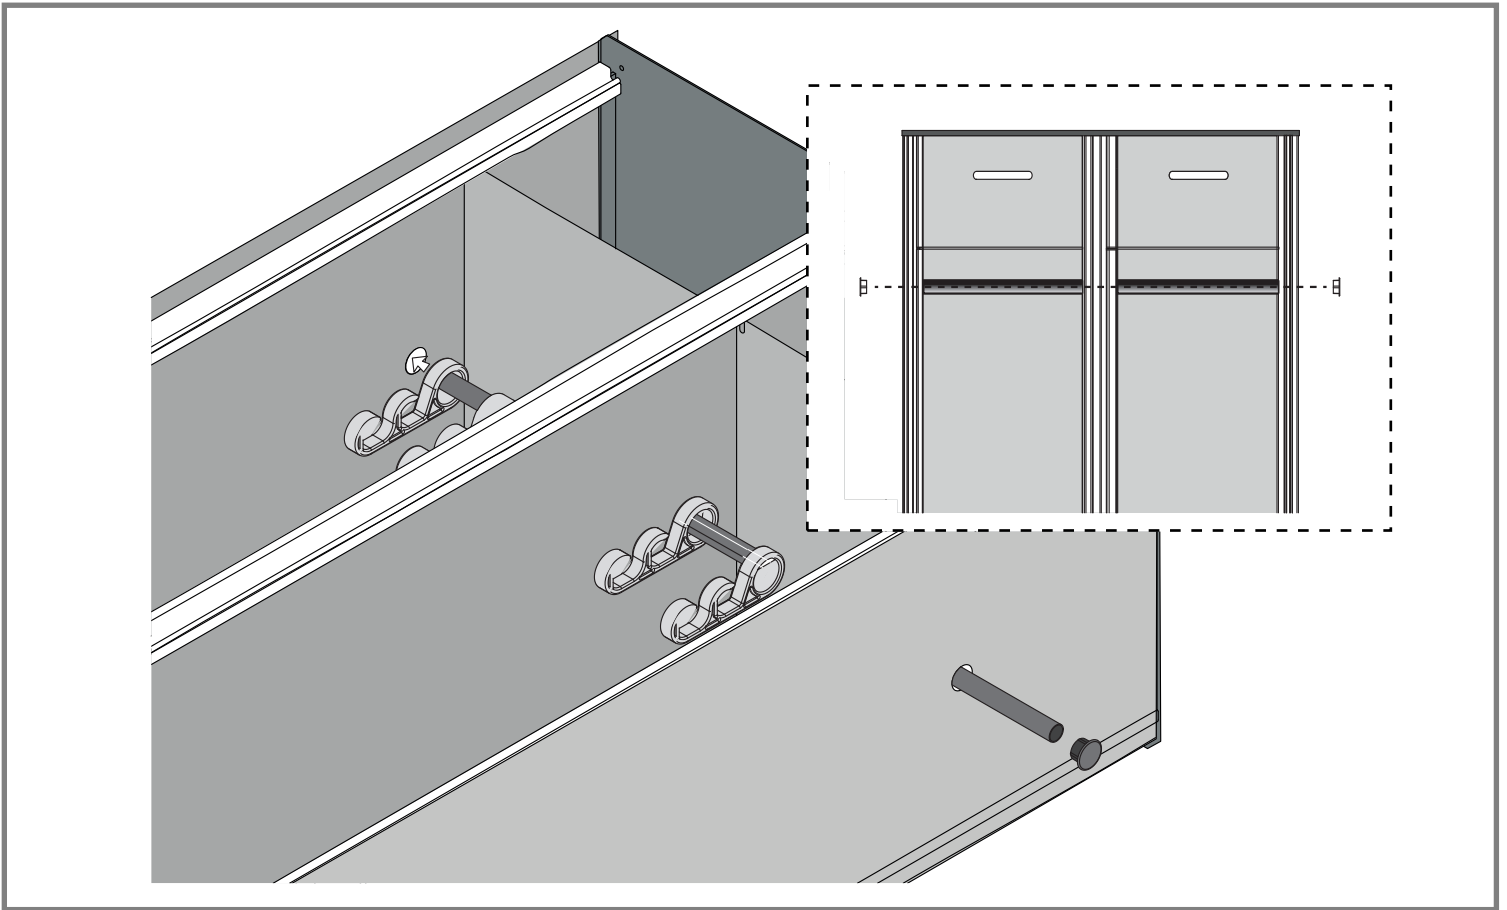

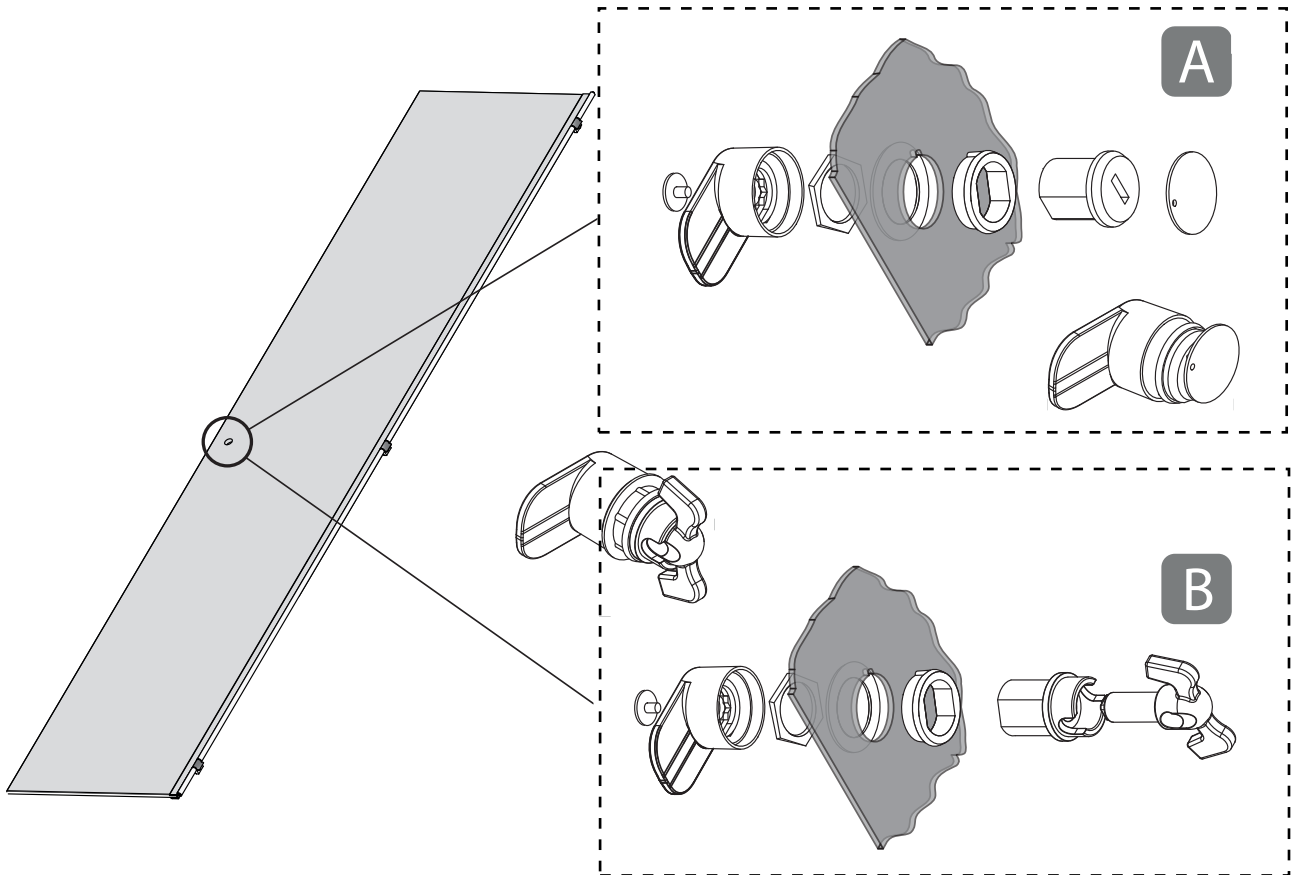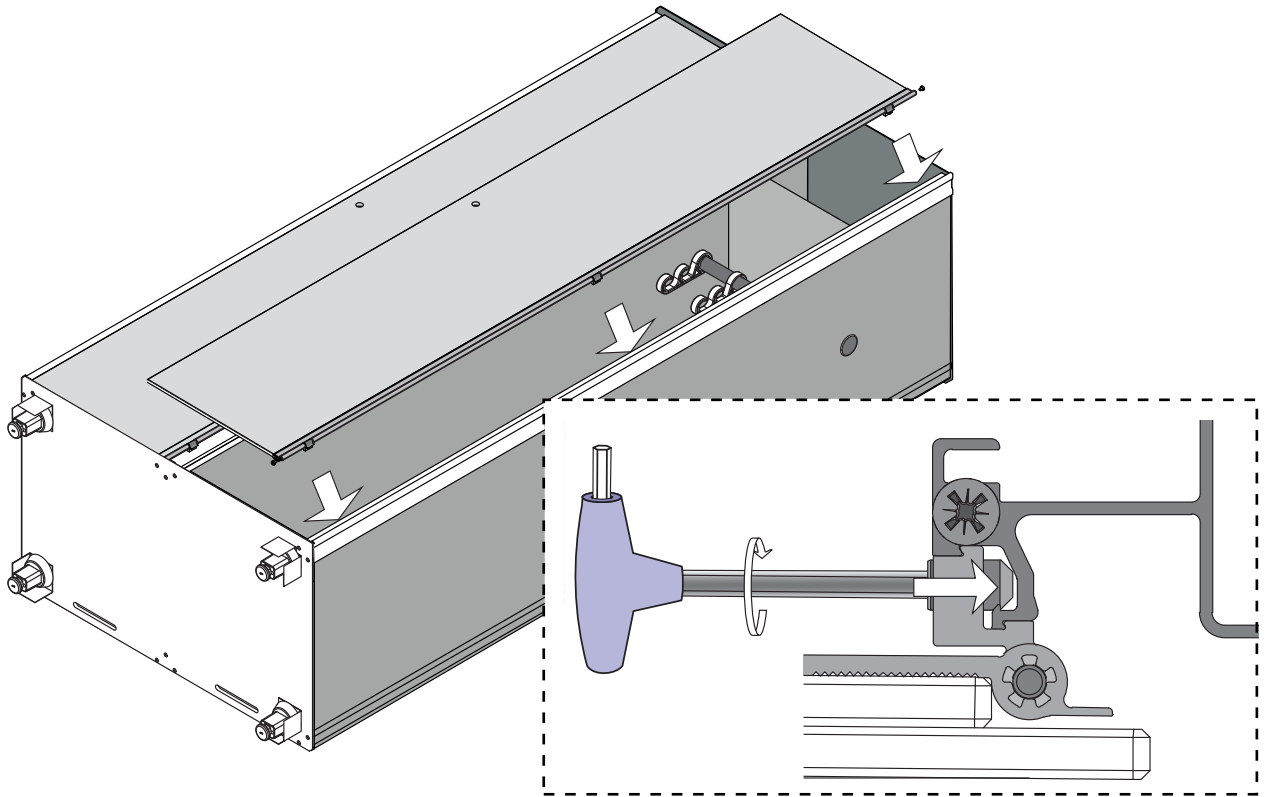


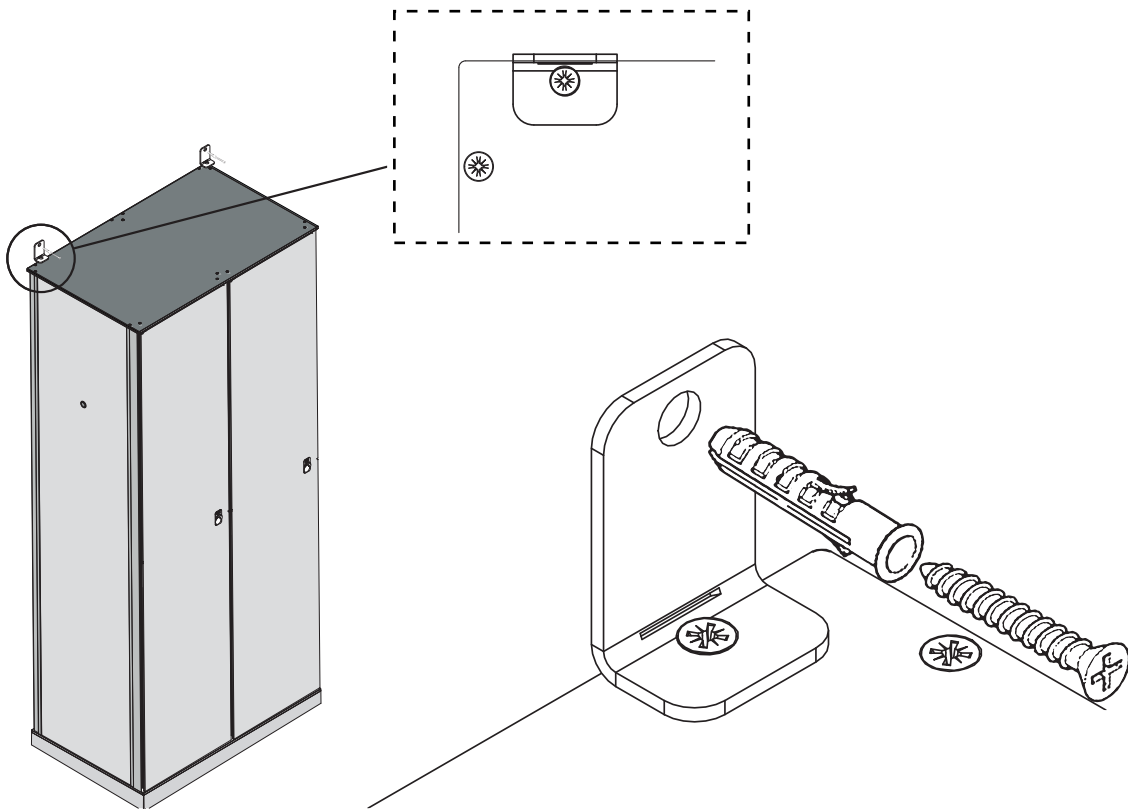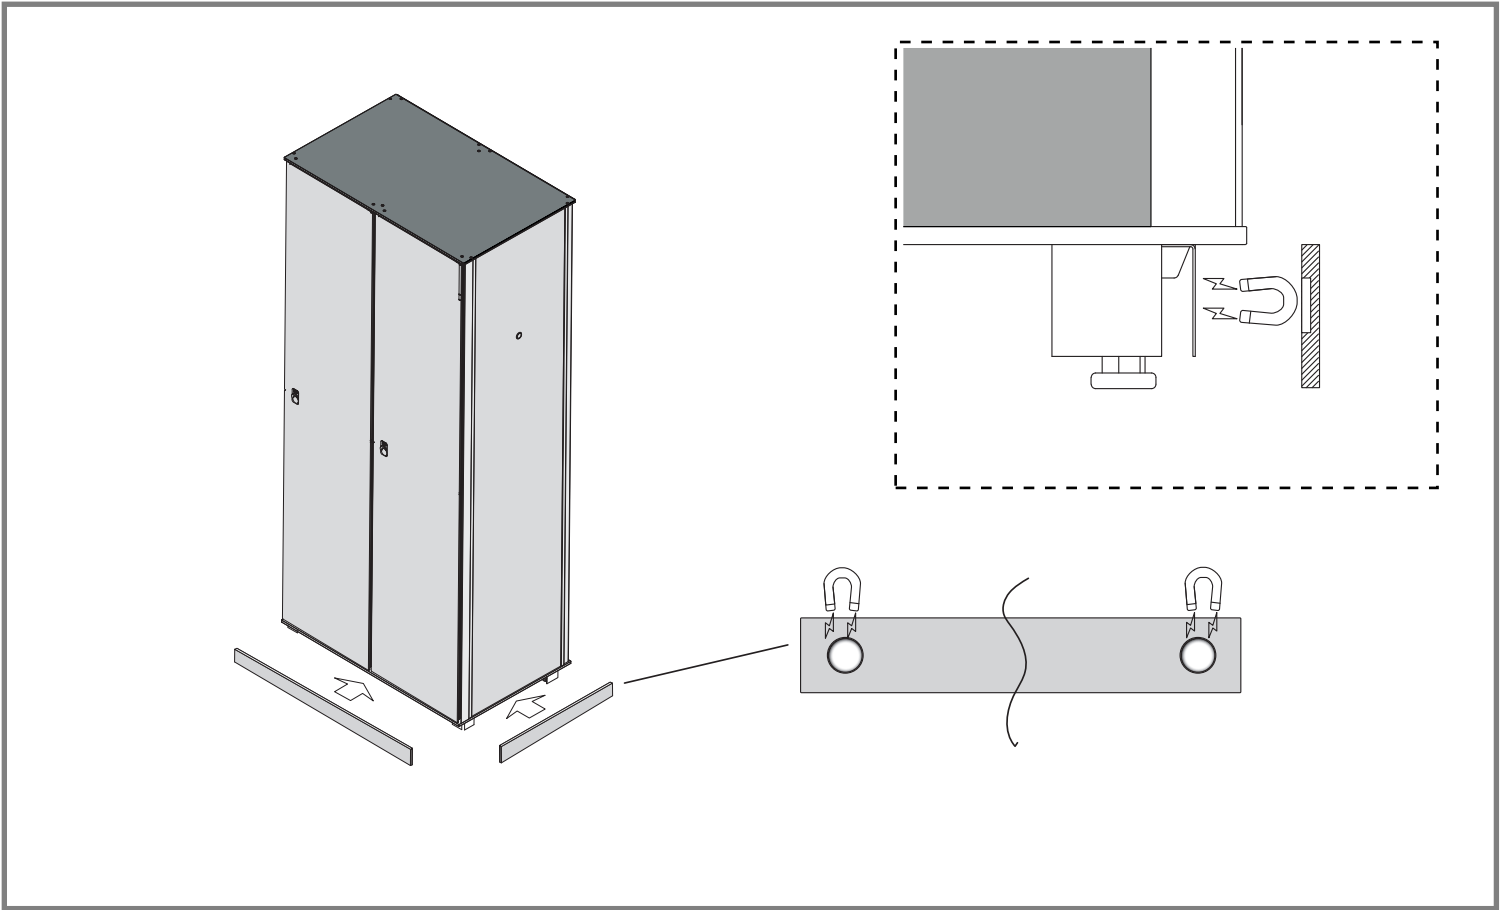




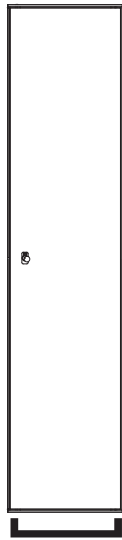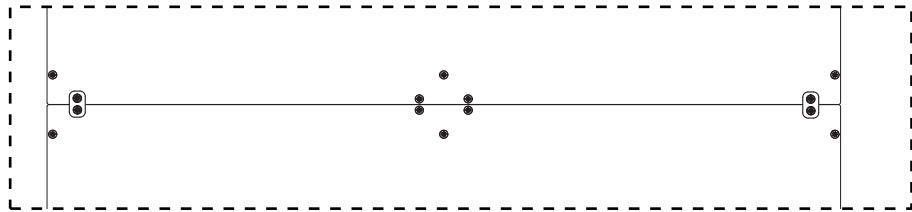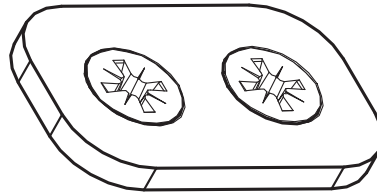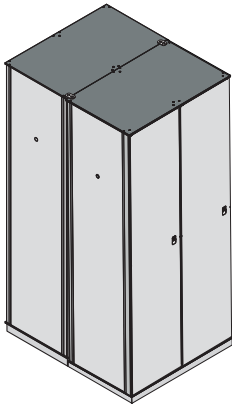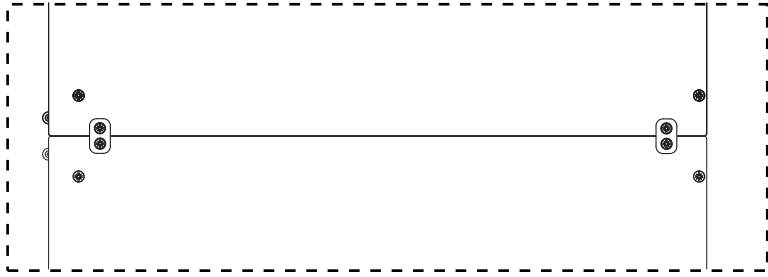


A

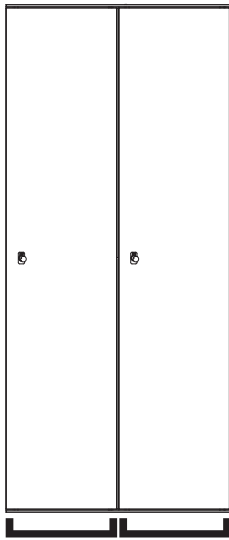

A A

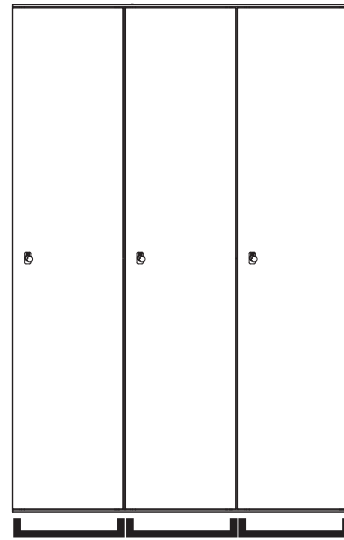

A B A

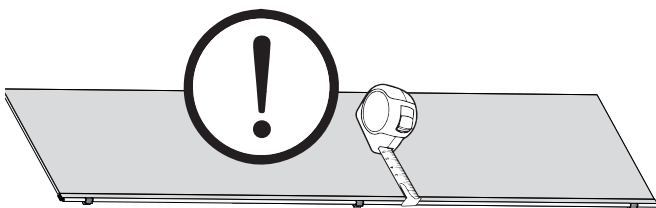

**B > A ~ 6mm**